

Installation Guide

BSK 42-42

©2025

BRUNNER®

INHALT

1	Basic informations.....	3
1.1	General Information.....	4
1.2	Tolerances of thermal concrete parts.....	6
2	Safety.....	9
2.1	Minimal distances.....	9
2.2	Heat radiation range.....	11
3	Installation.....	13
3.1	Further assembly tips & instructions.....	13
3.2	Base plate.....	15
3.2.1	Base plate BSK 42-42 & BSK 42-42-42.....	15
3.2.2	Set up the base plate.....	16
3.3	Heat protection plate (optional).....	18
3.3.1	Fitting heat protection plates.....	18
3.4	Cover plate BSK Flat 42-42 & BSK Corner 42-42-42.....	21
3.5	Cladding stones set.....	22
3.5.1	Cladding components BSK 42-42 (BSK18000-101).....	22
3.5.2	Assembly of the cladding elements.....	23
4	Drawings and technical data.....	29

1 BASIC INFORMATION



All instructions delivered with products must be observed. We do not accept any warranty claim or liability for damage resulting from failure to observe these installation instructions!
Improper installation can cause injury and material damage!

The floor space of the room must have a suitable structure and sufficient dimensions to ensure proper functioning of the fireplace.

Please note that other installation and assembly instructions are included in other packaging units!

Dimensioning of downstream heat accumulator must be according to valid stove-setting rules.

During installation of the fireplace, all dimensions and minimal clearances of the fireplace casing must be held as specified by the manufacturer.

All binding national or EU standards and local regulations for the installation of fireplaces must be observed.

All valid stove fitting rules and regulations of local construction law must be observed and followed.

Please follow the relevant regulations of your country.

When these instructions are followed and all works are done properly, this will ensure a safe, energy-saving and environmentally friendly operation of the stove. Pictures shown are not to be considered as complete representations of any kind.

Subject to technical and assortment changes.

Please notify your supplier of any damage which might have occurred during transport.

Please keep these instructions.

1.1 GENERAL INFORMATION

Fireplace insert

The fireplace cladding sets of the Brunner System fireplace series are suitable only for the indicated fireplace inserts offered by Ulrich Brunner GmbH.

Brunner System Kamine	Suitable fireplace inserts
BSK 01	Eck-Kamin lifting door (ST) 57/52/52 with 50 mm mounting frame Eck-Kamin side-opening (DT) door 57/52/52 with door frame
BSK 02	Eck-Kamin lifting door 57/67/44 L/R with 50 mm mounting frame
BSK 02.1	Kamin-Kessel Eck 45-67-44 S04.2
BSK 03	Eck-Kamin lifting door 57/82/48 L/R with 50 mm mounting frame
BSK 04	Stil-Kamin side-opening door 62/76 with 50 mm mounting frame Stil-Kamin Tunnel 62/76 S/S as well as S/K with 50 mm mounting frame
BSK 05.1	Panorama-Kamin 57/40/60/40 with fire table
BSK 06	Architektur-Kamin lifting door 45/101 with 50 mm mounting frame Architektur-Kamin Tunnel 45/101 S/S as well as S/K with 50 mm mounting frame Kamin-Kessel Tunnel 45/101 S/S as well as S/K with 50mm mounting frame Kamin-Kessel 45/101 and Kamin-Kessel Tunnel 45/101 (For the horizontal outlet rear or left/right, "Smoke pipe branch BSK", art.no. I019490 is necessary.)
BSK 07	Architektur-Kamin 38/86/36 corner with 50 mm mounting frame
BSK 08	Stil Kamin 51/67 lifting and side-opening door with hot air-or boiler top Stil Kamin Tunnel ST/ST, ST/DT, DT/DT 51/67 with hot air-or boiler top for: Stil-Kamine ST with mounting frame 50 and DT with door frame
BSK 09	Eck-Kamin 42/42/42 side-opening door with frame
BSK 10	Panorama-Kamin 42/42/42/42 with firetable
BSK 11	Panorama-Kamin 70/25/40/25 with firetable
BSK 12	Eck-Kamin 42/57/30 Kamin-Kessel Eck 42/57/30
BSK 12.1	Kamin-Kessel Eck/corner 42-57-30 S04.2
BSK 13	Panorama-Kamin 51/66/50/66 with firetable and support frame
BSK 42-42	BKH 5.0 flat 42-42
BSK 42-66	BKH 5.0 flat 42-66 BKH 5.0 flat 42-66 Tunnel
BSK 42-42-42	BKH 5.0 corner 42-42-42
BSK 42-66-42	BKH 5.0 corner 42-66-42
BSK 45-45-45-45	BKH 5.0 Panorama 45-45-45-45

The data specified in these instructions regarding spacing and insulation thicknesses apply.

If the installation differs from these instructions, please refer to the installation instructions for the heating insert for the required distances and insulation thicknesses.

The Brunner System Fireplace components fulfil the requirements of exposed concrete class SB2.

Floor

On flammable floors, the fireplace must be placed on a plate made of non-flammable material. This plate must be at least 500 mm long in front and 300 mm wide on both sides of the fireplace. The base plate of fireplace casing must be carefully set to level; please pay attention, that it lies on the floor over the entire surface. It is recommended to use the wall as reference and set the base plate at 90 degrees. The completely set fireplace cannot be moved or turned afterwards.

Acrylic adhesive

Used pointwise to stick elements together and to fill the gaps.

Painting

24 hours after assembly you can paint the fireplace casing. Plastered walls must be previously sanded with fine abrasive paper.

Hairline cracks

Joints between the elements of fireplace casing and the between the house wall and the fireplace casing can tend to the formation of small cracks. This is normal and no cause for concern. Small cracks can be removed with the revision set (Art.Nr.: 900300). After 24 hours the joint can be painted over.

Bigger cracks

Transportation damage must be reported immediately to the shipping company. Replacement parts can be order at Ulrich Brunner GmbH. In the case of bigger defects that cannot the repaired with the revision set (Art.Nr.: 900300), it is possible to request for exchange at Ulrich Brunner GmbH as part of your warranty.

Replacement requests:

When ordering replacement parts it is necessary to mark the damaged parts on the attached packing list and make a picture of the damage. Then, the printed picture and packing list should be sent back to Ulrich Brunner GmbH. The replacement part will be sent as soon as possible.

Fireplace casing with concrete look

The fireplace cladding with concrete look, despite the best possible care during manufacturing and shipping, can show slight irregularities like air inclusions, small cracks or unclean edges. This corresponds entirely to the concrete look and does not constitute a reason for a claim. Cracked or significantly damaged elements will be replace as part of your products' warranty.



Do not use adhesive tape or similar for the exposed concrete parts! Removing the adhesive tape will permanently damage the surface. For plastering or painting work, cover the fireplace cladding with a non-adhesive masking film.

Built-in components

If any additional components like electronics (EOS) or similar are installed inside the fireplace casing, the max. allowed ambient temperature must be followed. Electronics must be installed in such a way to provide for rear ventilation.

All safety distances are minimal required distances.

Subject to errors and changes!




Please follow the separate installation instructions for the fireplace insert.

1.2 TOLERANCES OF THERMAL CONCRETE PARTS

The following tolerances are valid for all parts of our system fireplace/stove casings. Except where otherwise indicated, all data refer to the nominal dimensions, as found in dimensional drawings.


Length Tolerances

For each part, the indicated tolerances apply.

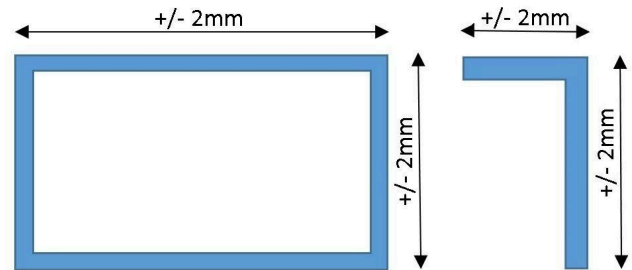

Height Tolerances


For each part, the indicated tolerances apply.

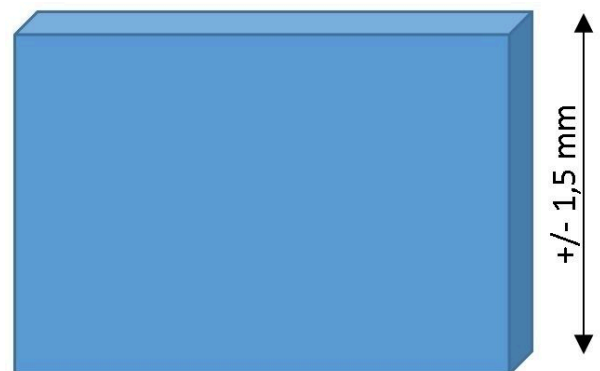


Tolerances of Flatness

For parts with nominal dimensions up to 950 mm, a tolerance of +/- 2.5 mm applies. Above this dimension, a tolerance of +/- 3 mm applies.

These tolerances apply also for the base support and top cover parts. The leveling board (R) must be placed in parallel to the basic body!

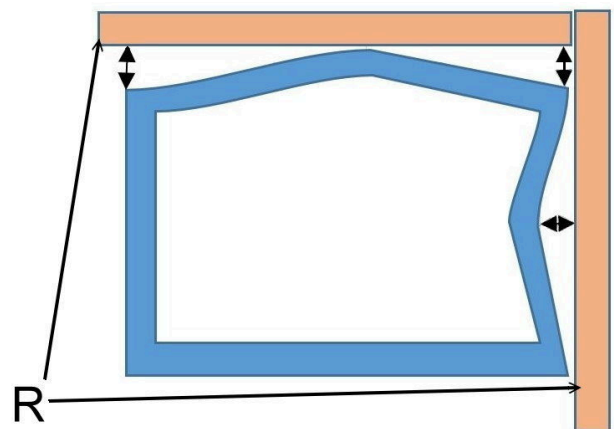

Im. 1: Leveling boards placed correctly

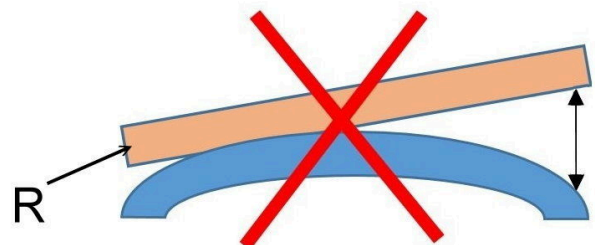


Im. 2: Incorrectly placed leveling board

Tolerances of Angle


In order to determine the deviations of angles, place the square measuring tool along the long edge!

For nominal dimensions up to 600 mm, a tolerance of 0.28%, i.e. 1.7 mm applies. For nominal dimensions up to 900 mm, a tolerance of 0.30%, i.e. 2.4 mm applies.

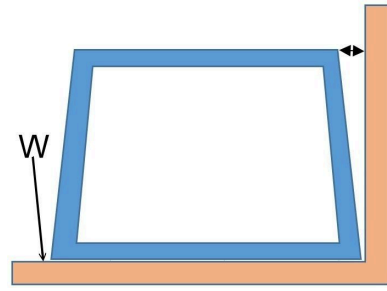


Roundness

Up to a nominal diameter of 650 mm, a tolerance of 0.25%, i.e. 1.62 mm applies. For diameters above this value, a tolerance of 0.28%, i.e. 2.38 mm applies.

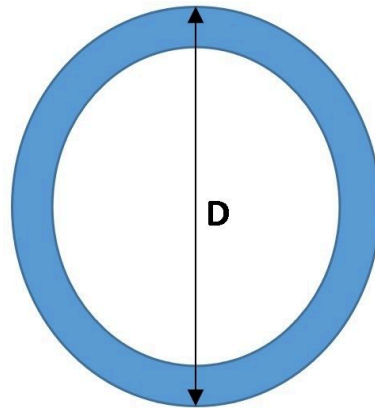

Wall thicknesses

For wall thicknesses, a tolerance of 3.5% applies.

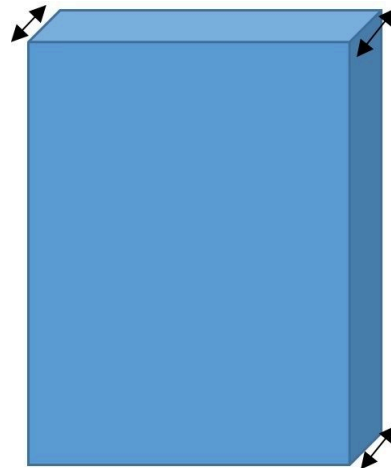

The overall appearance with color shade differences being present or not can be assessed in general only after a longer period of time (several weeks in some cases). The uniformity of color should be assessed from a typical viewing distance.


2 SAFETY

2.1 MINIMAL DISTANCES


Minimal distances to adjacent walls

Depending on wall type (flammable or non-flammable wall), the minimal distances are different. With installed heat protection screen it is possible to minimize the distance to adjacent wall.

Without heat protection screen:


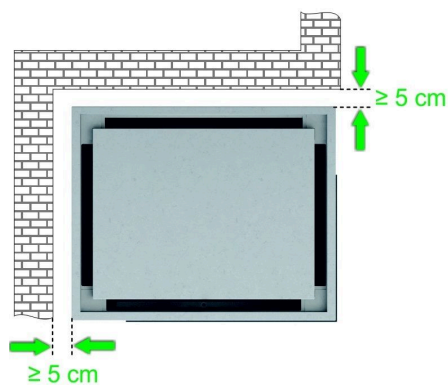


With installed heat protection screens:

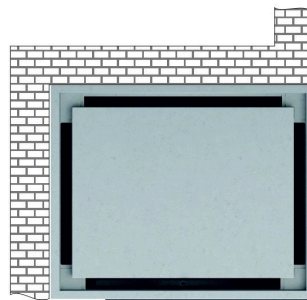



Other walls:

- ▶ aerated concrete
- ▶ ceramic bricks
- ▶ sand-lime bricks
- ▶ mineral building materials with wall thicknesses > 10 cm

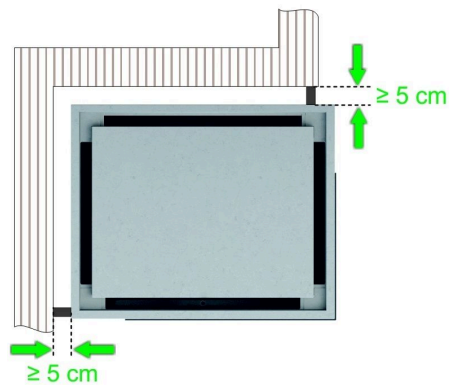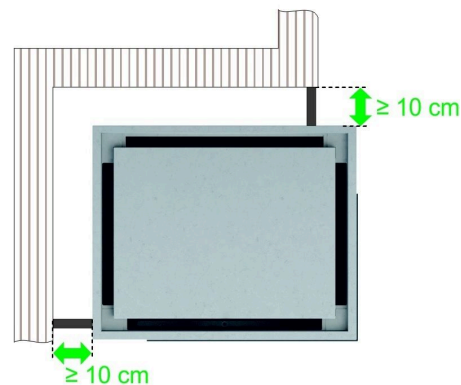

Walls requiring protection:

- ▶ flammable walls and wall structures
- ▶ load-bearing reinforced concrete walls
- ▶ other walls up to 10 cm thickness
- ▶ walls with built-in furniture behind them (heat accumulation)

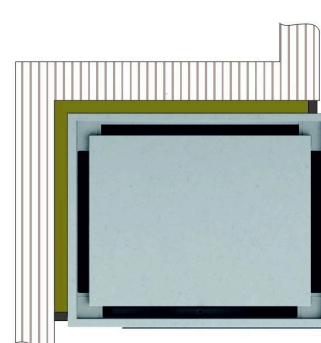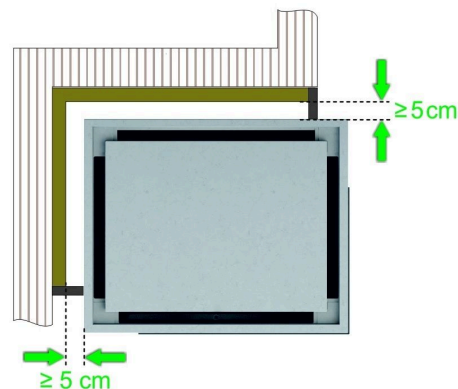

Walls requiring protection with 10 cm brick lining or alternative insulation

Thermal concrete slabs (assembled by craftsman, with exposed joints)



Non-flammable wall, not requiring protection (other walls)



Flammable walls requiring protection




Brick lining or equivalent alternative insulation material, insulating panel

2.2 HEAT RADIATION RANGE

Within the range of heat radiation through the fireplace door (glass pane) there must be a minimal distance to all flammable parts (e.g. built-in furniture, fixtures) of at least 80 cm.

Outside the heat radiation range, any flammable fixtures cannot be exposed to temperatures above 85°C. Large-dimensioned parts from flammable materials or built-in furniture must have a clearance of at least 5 cm to external fireplace cladding. In this clearance, the room air must be able to circulate without any obstacles.

In general, parts of external fireplace cladding are allowed to be installed without any clearances, if such parts are not exposed to temperatures above 85°C under any circumstances.

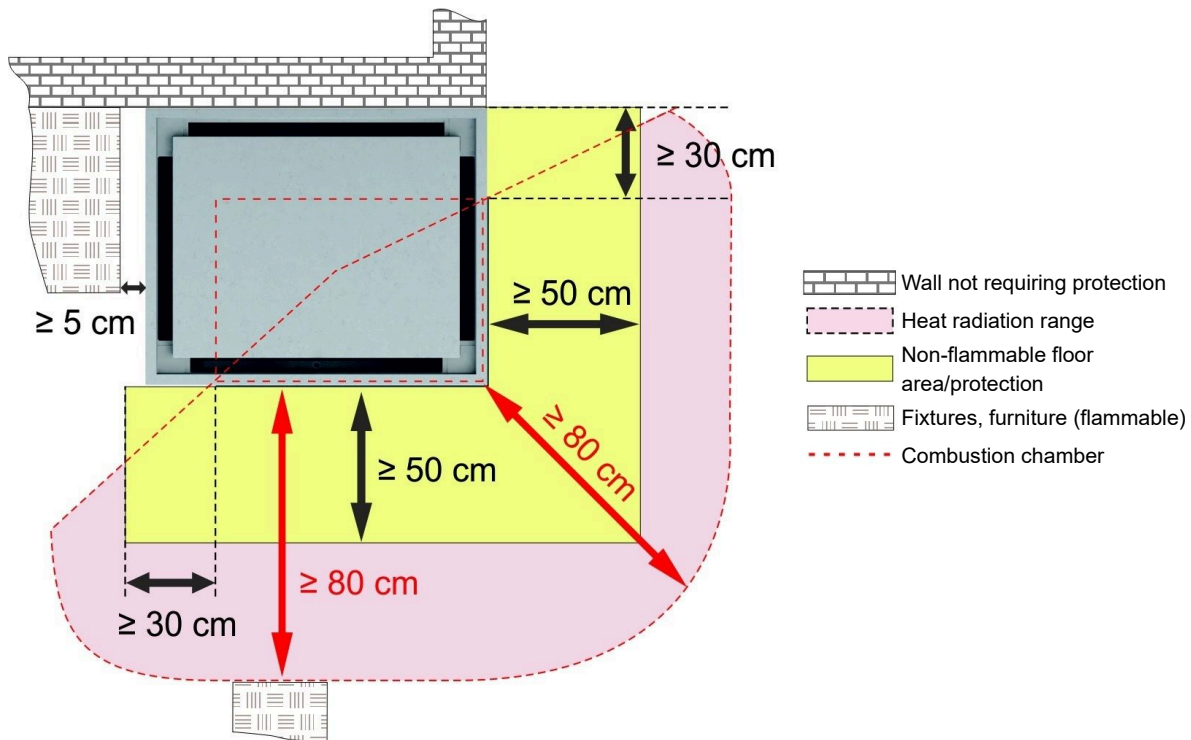

3 INSTALLATION


3.1 FURTHER ASSEMBLY TIPS & INSTRUCTIONS

NOTICE

Observe further instructions for proper assembly!

- ▶ Follow the instructions for BKH 42-42.
- ▶ Observe the installation instructions for the heat exchanger variants.


Installation Manual BKH

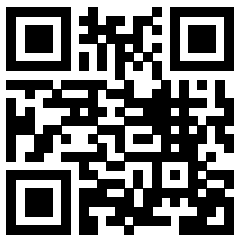

Installation Manual
BKH flat 42-42

<https://www.brunner.de/23010>


Assembly instructions for Heat exchanger

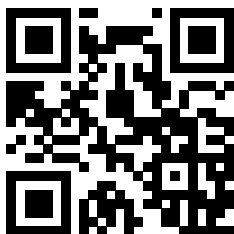

Assembly instructions
Heat exchanger rings



<https://www.brunner.de/21776>

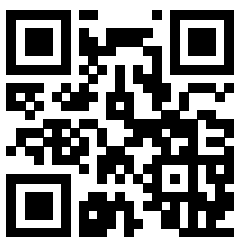


Assembly instructions
Modular Accumulator MAS



<https://www.brunner.de/22266>

Assembly instructions for Damper flap control mechanism

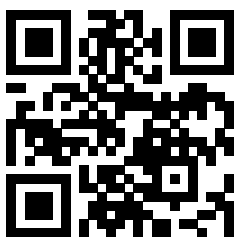

Assembly instructions
Damper flap control mechanism

<https://www.brunner.de/23602>



CAUTION

Risk of injury due to heavy loads


Moving the heating element and heavy cladding parts can cause crushing injuries.

- ▶ Ensure a secure hold when carrying the individual parts.
- ▶ Move the heating element and cladding parts with at least two people.

3.2 BASE PLATE

3.2.1 BASE PLATE BSK 42-42 & BSK 42-42-42

Components of the base plate complete (BSK18000-102)

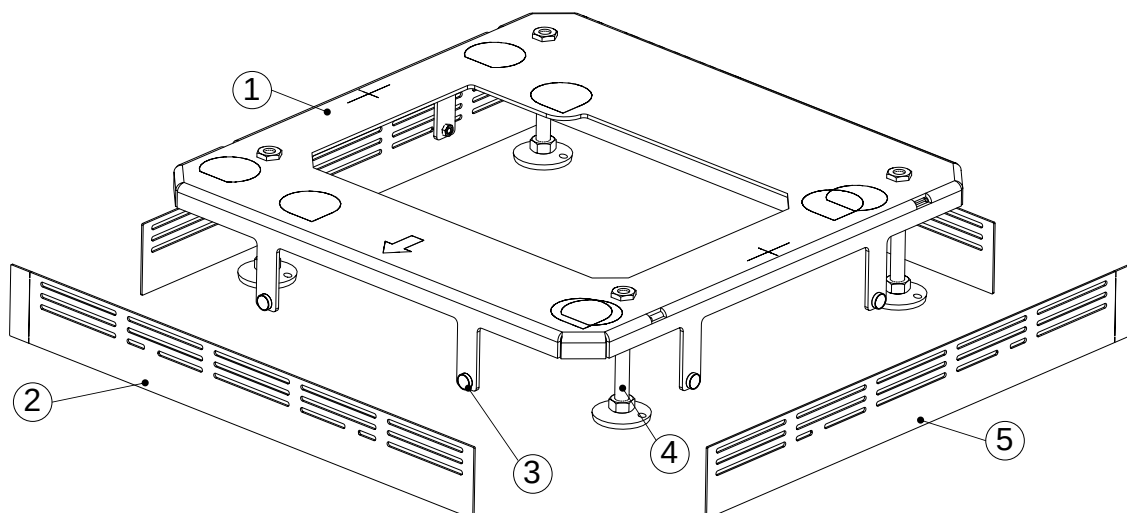


Pos.	Designation	Part no.	piece
1	Base plate	BSK18000-103	1
2	Front-rear panel	BSK18000-119	2
3	Magnet	903274	8
4	adjustable foot	I007325	4
5	Left-right cover	BSK18000-118	2

3.2.2 SET UP THE BASE PLATE


Work steps

1. Fitting the base plate

- Fit the adjustable feet to the underside of the base plate.

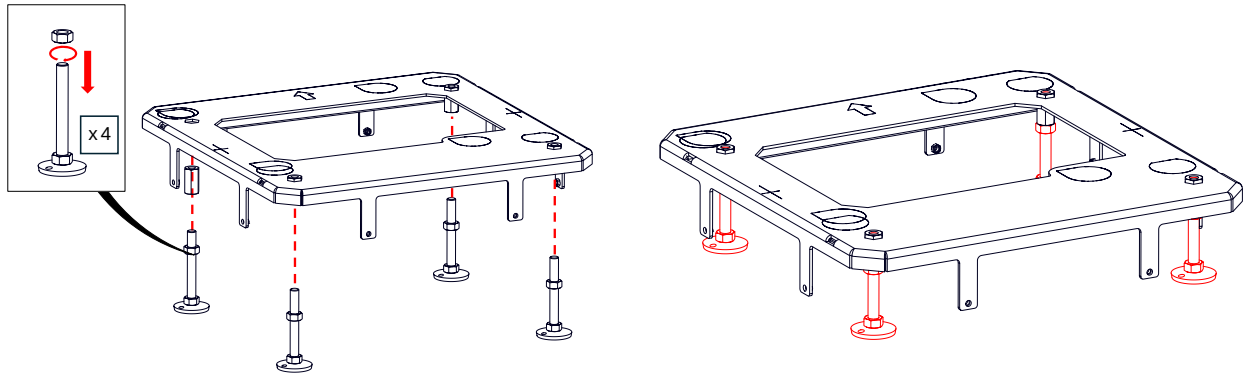


- Attach pot magnets on the sides.

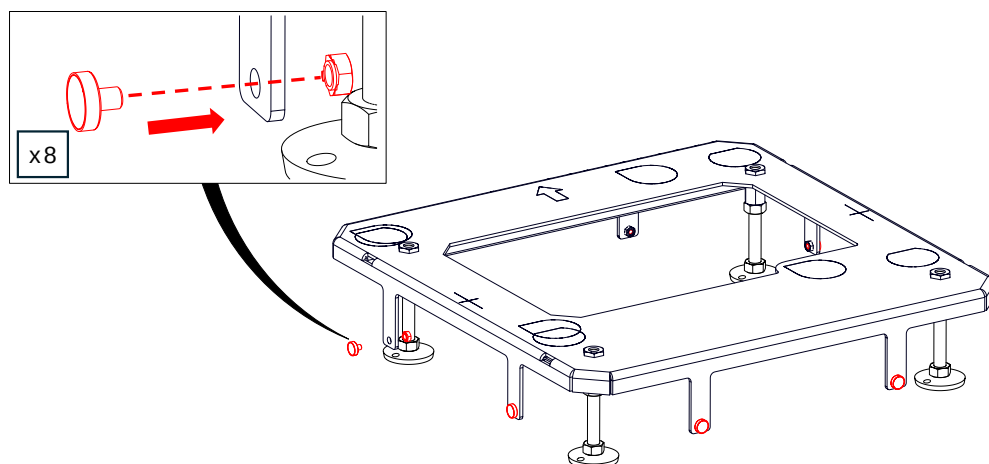


2. Adjusting the base plate

- Position the base plate using the markings.

The arrow points towards the front.

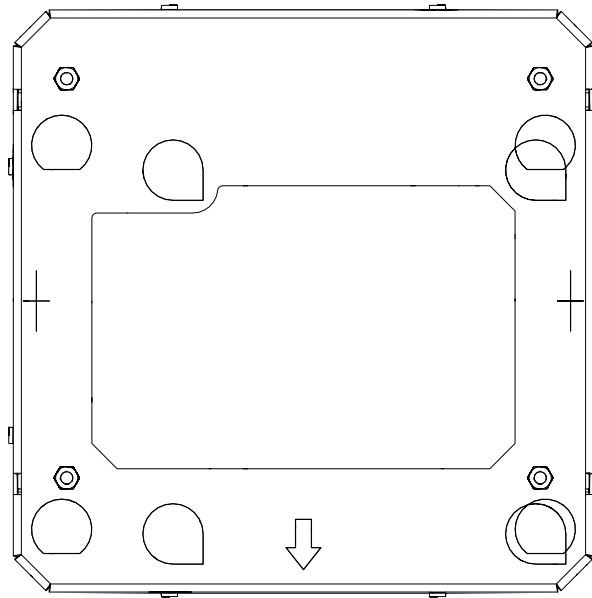


- Align the base plate

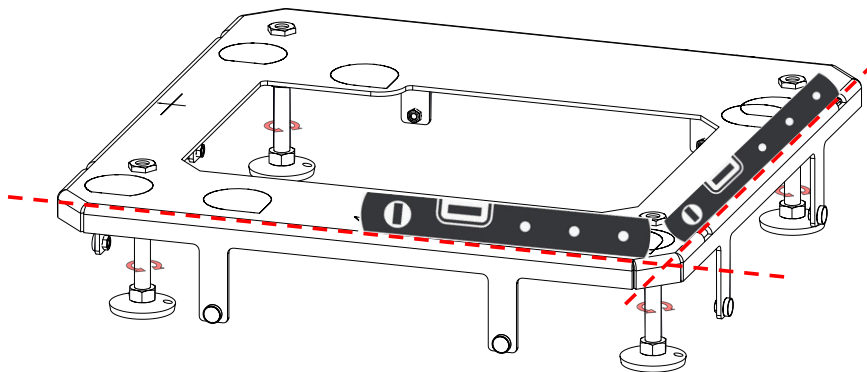

3.3 HEAT PROTECTION PLATE (OPTIONAL)

Components of heat protection plate BSK 42-42 (BSK18000-125)

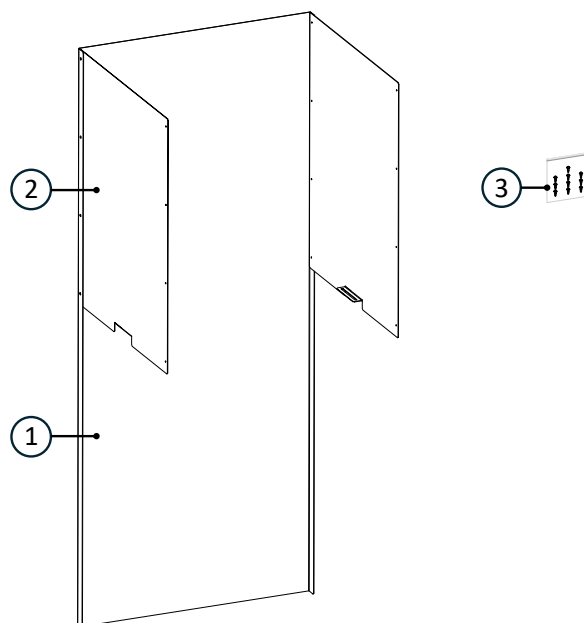





Pos.	Designation	Item no.	piece
1	Heat protection plate rear panel	BSK18000-126	1
2	Heat protection plate le-ri	BSK18000-127	2
3	Supplementary pack of self-tapping screws (D3.5x13)	N008067	1


3.3.1 FITTING HEAT PROTECTION PLATES

The heat protection plates are optional.


If required, we strongly recommend fitting the heat protection plates before the lower BSK rings and the reheating surface or dome are installed!

Subsequent installation of the heat protection plates is generally not possible!

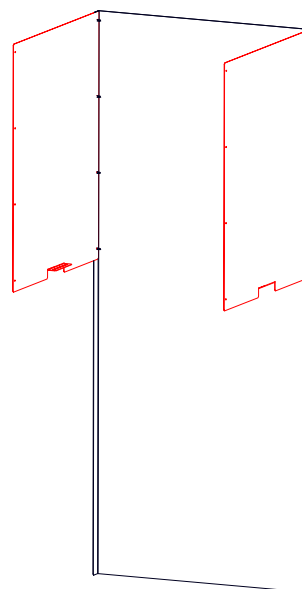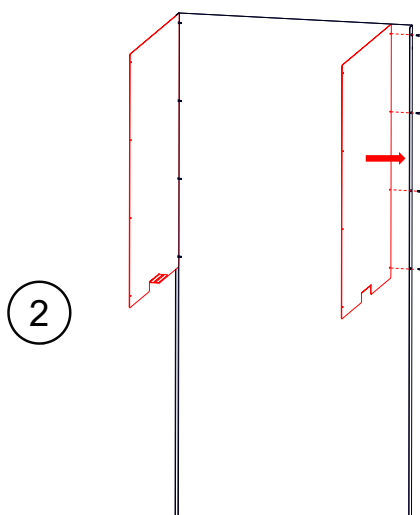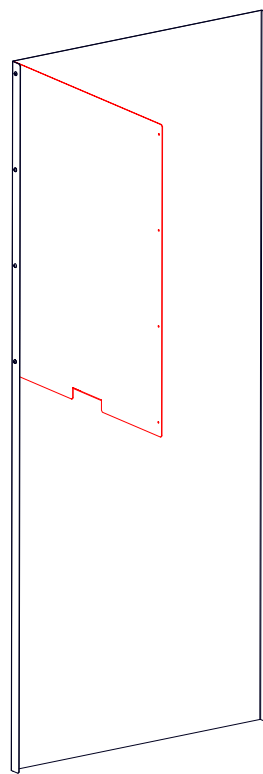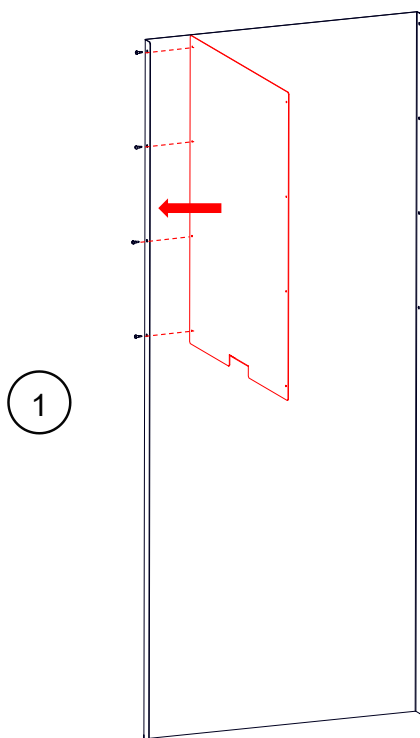

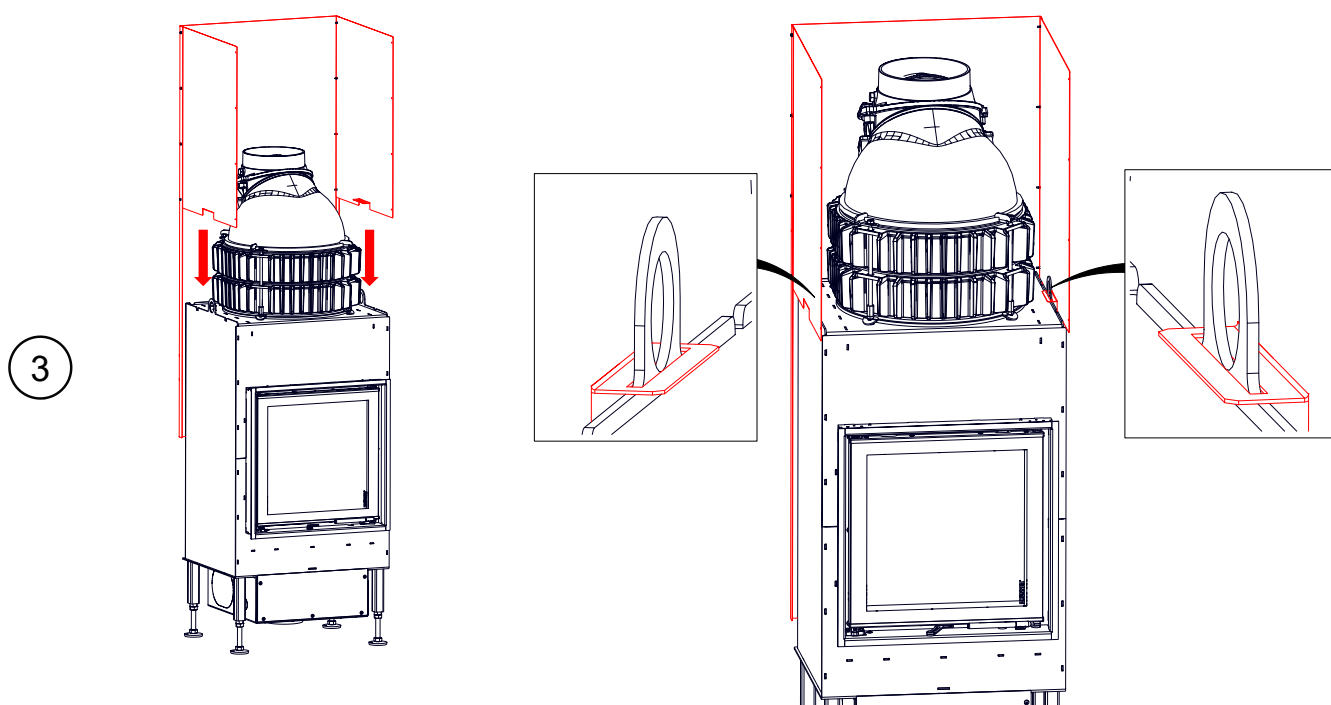


3.4 COVER PLATE BSK FLAT 42-42 & BSK CORNER 42-42-42

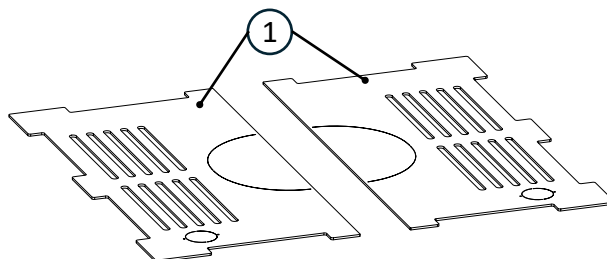

Pos.	Designation	Item no.	Piece
1	Two-piece cover plate	BSK18000-120	1

3.5 CLADDING STONES SET

3.5.1 CLADDING COMPONENTS BSK 42-42 (BSK18000-101)

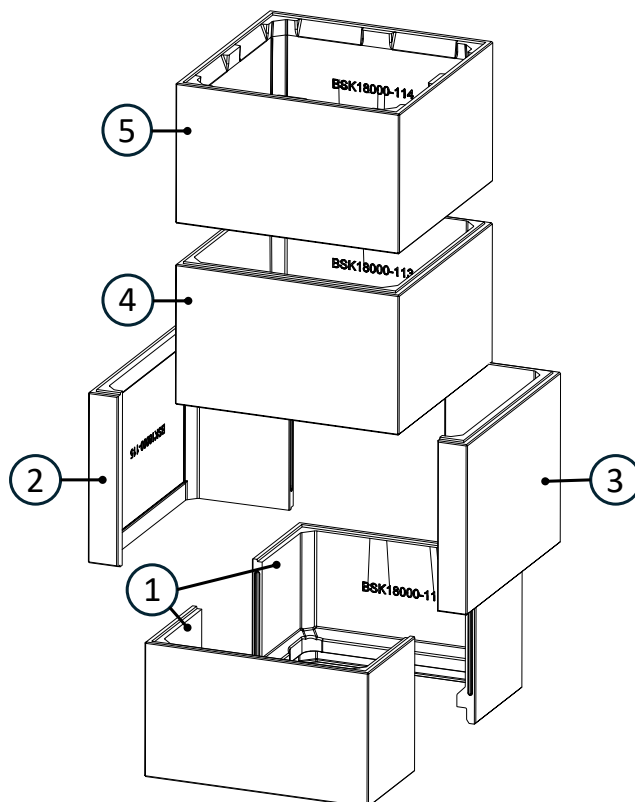


Pos.	Designation	Item no.	Piece
1	Base ring	BSK18000-111	2
2	Side panel B	BSK18000-115	1
3	Side panel A	BSK18000-112	1
4	Top ring 1	BSK18000-113	1
5	Upper ring 2	BSK18000-114	1

3.5.2 ASSEMBLY OF THE CLADDING ELEMENTS

Work steps


1. position the heating insert

- Place the heating insert on the base plate.

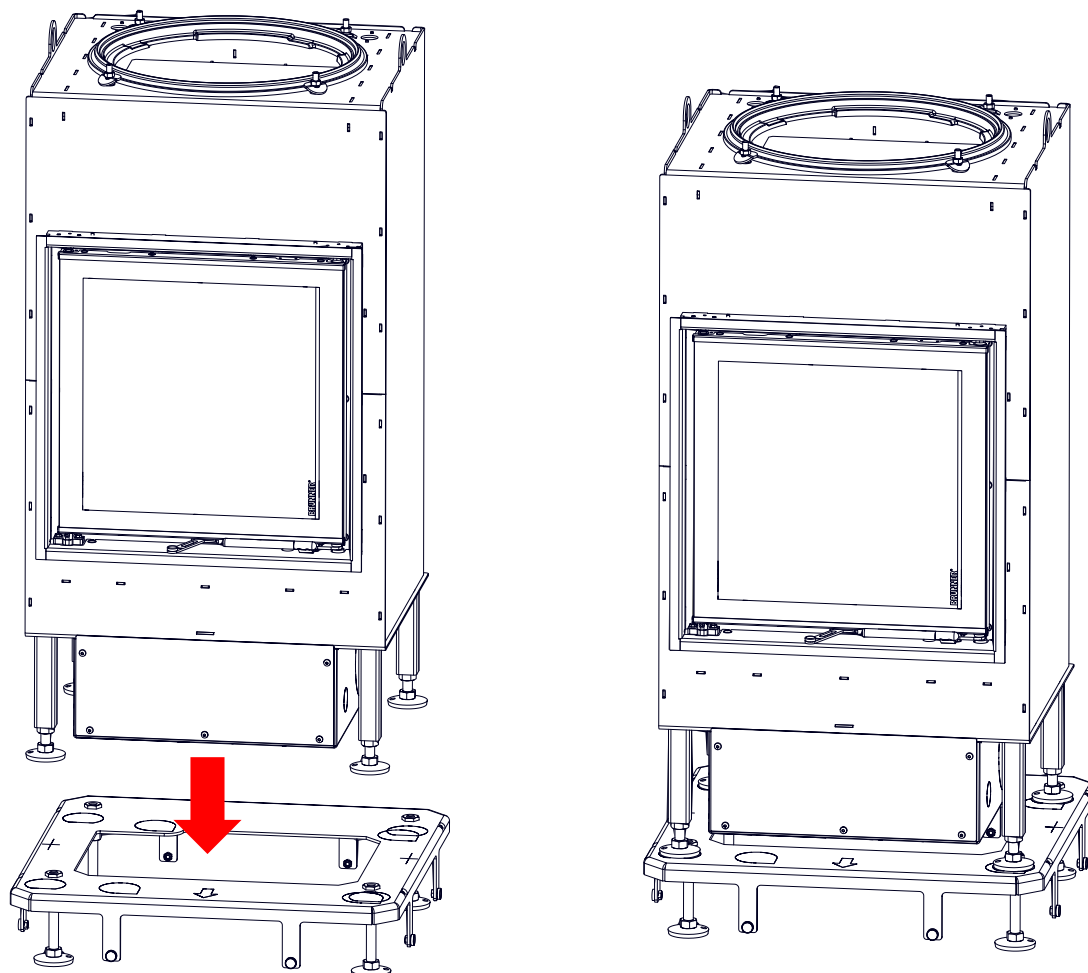


Markings on the base plate: Position of the adjustable feet for different heating insert versions.


Corner fireplace left

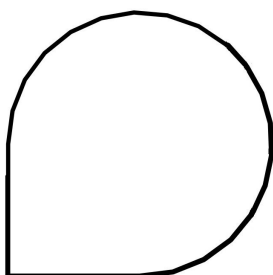


Corner fireplace right

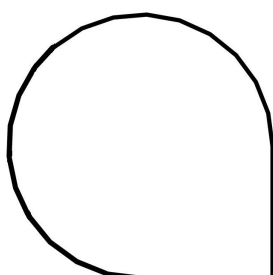

Flat fireplace

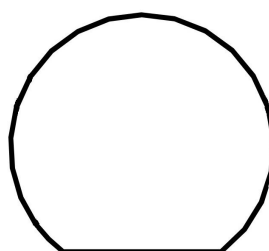


Fireplace tunnel

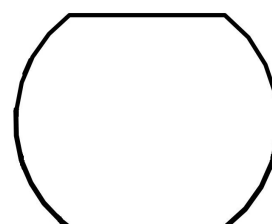


- Place the base ring at the back of the base plate.

Use the lateral markings on the base plate for orientation.

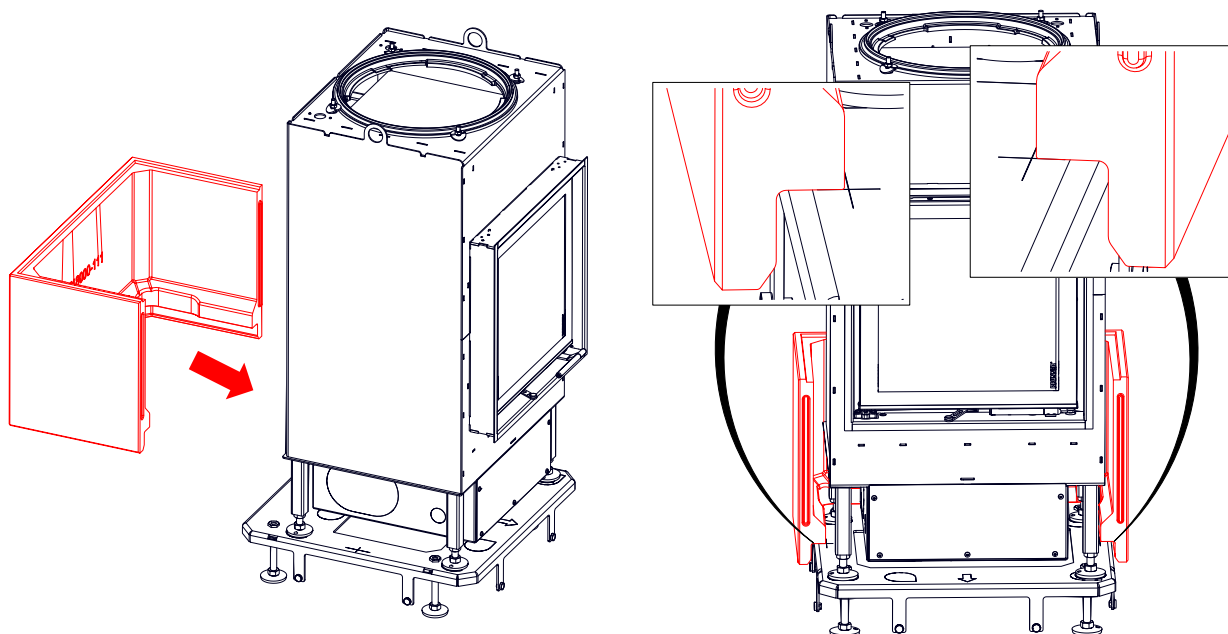


- Adjust the height.

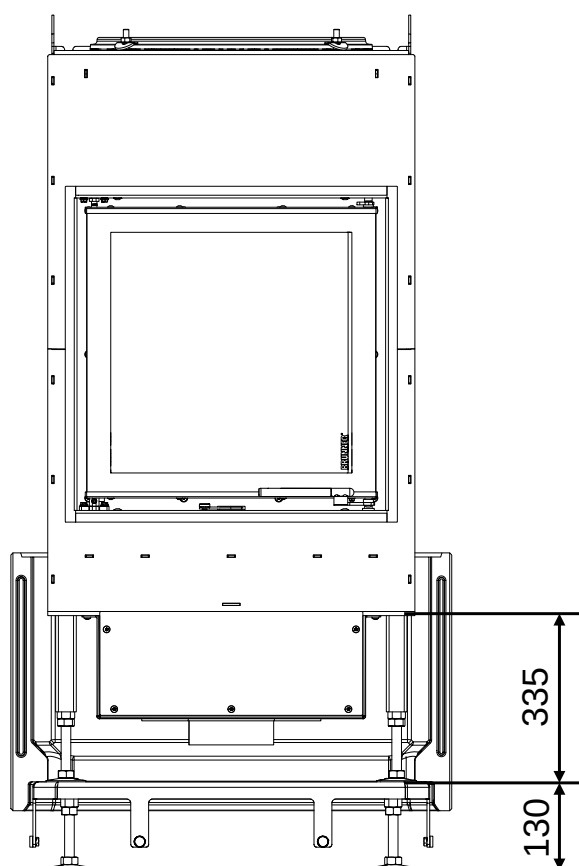


2. assemble the mold block set

- Place the base ring on the front of the base plate.

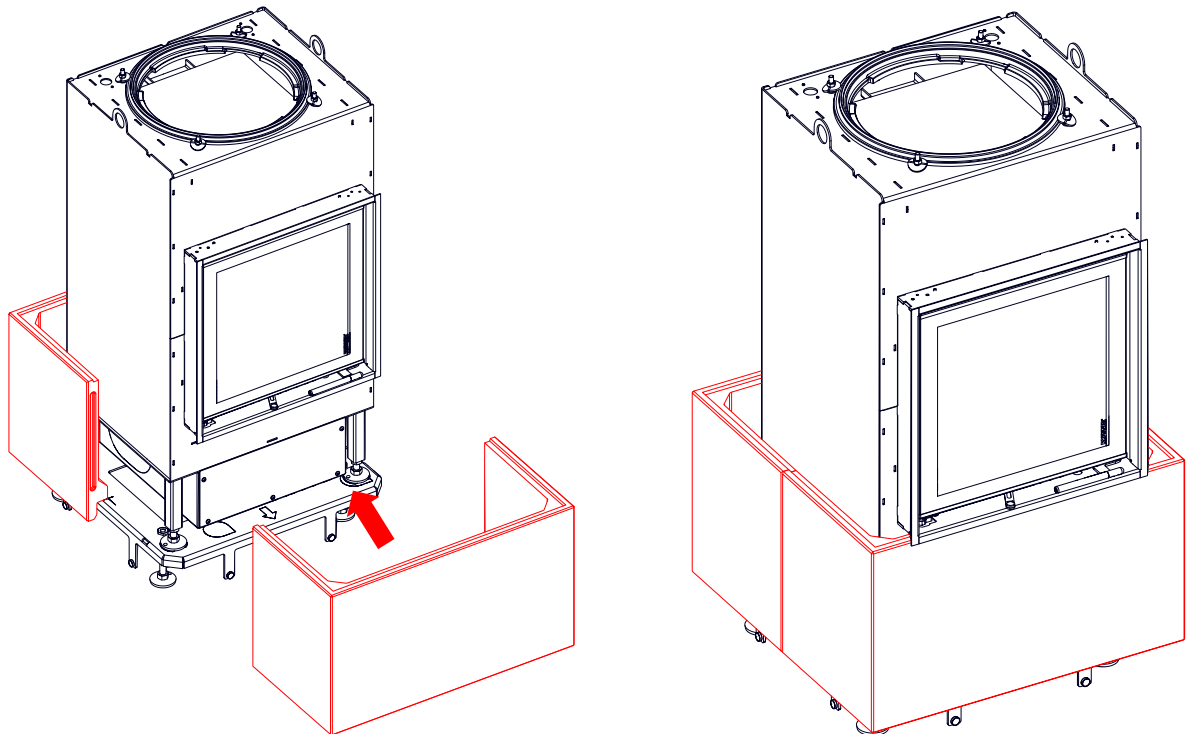


- Place the side parts.

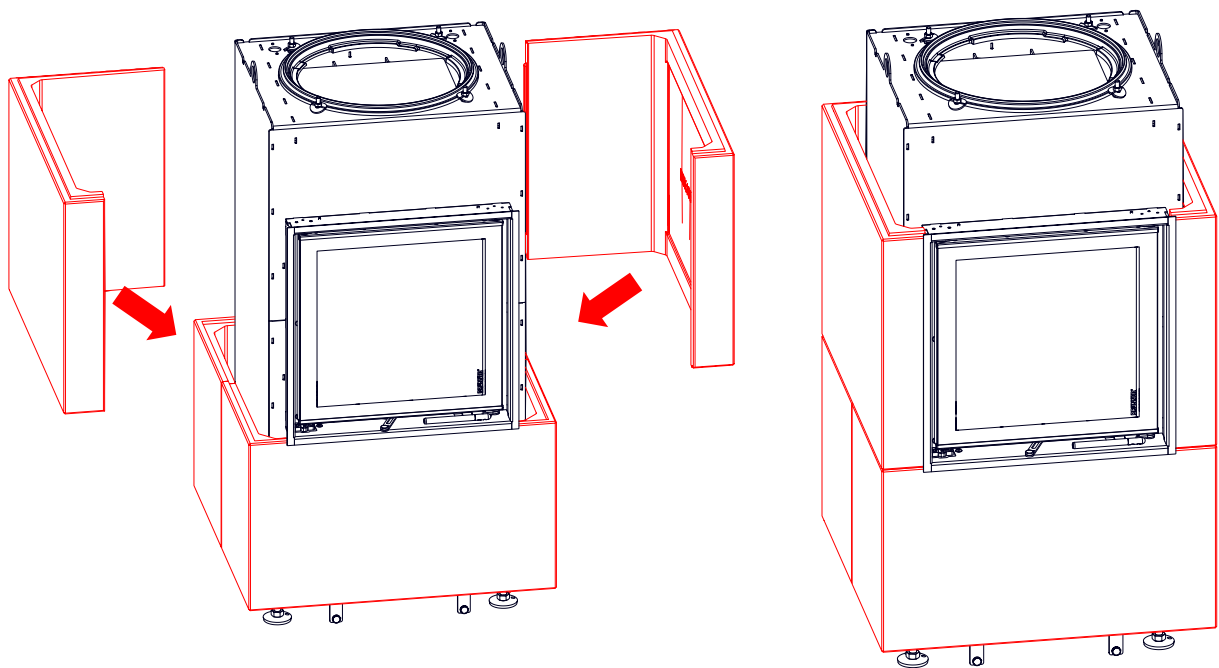



Install the heat exchanger variant before fitting the top rings.

- Fit top rings 1 and 2.

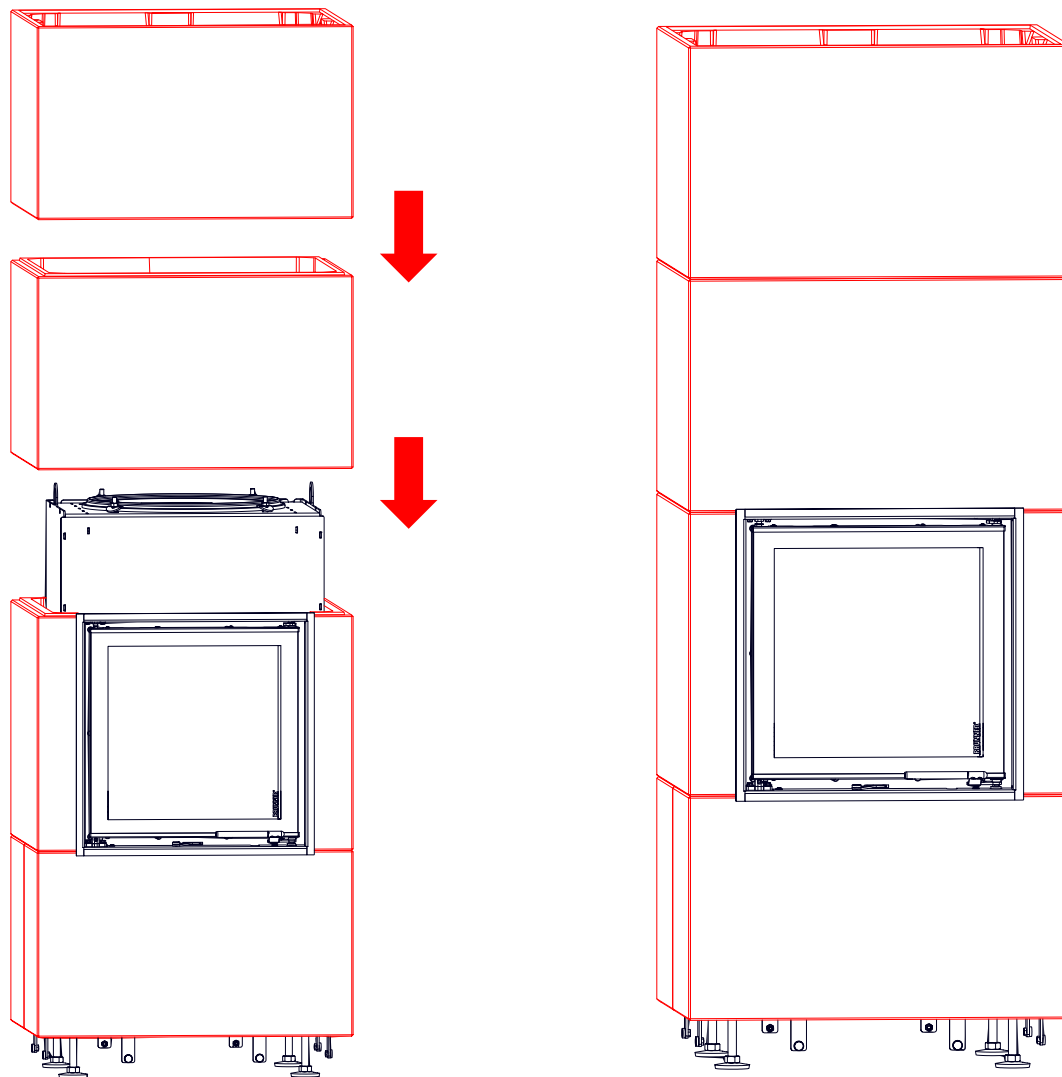


- Fit the cover plates.

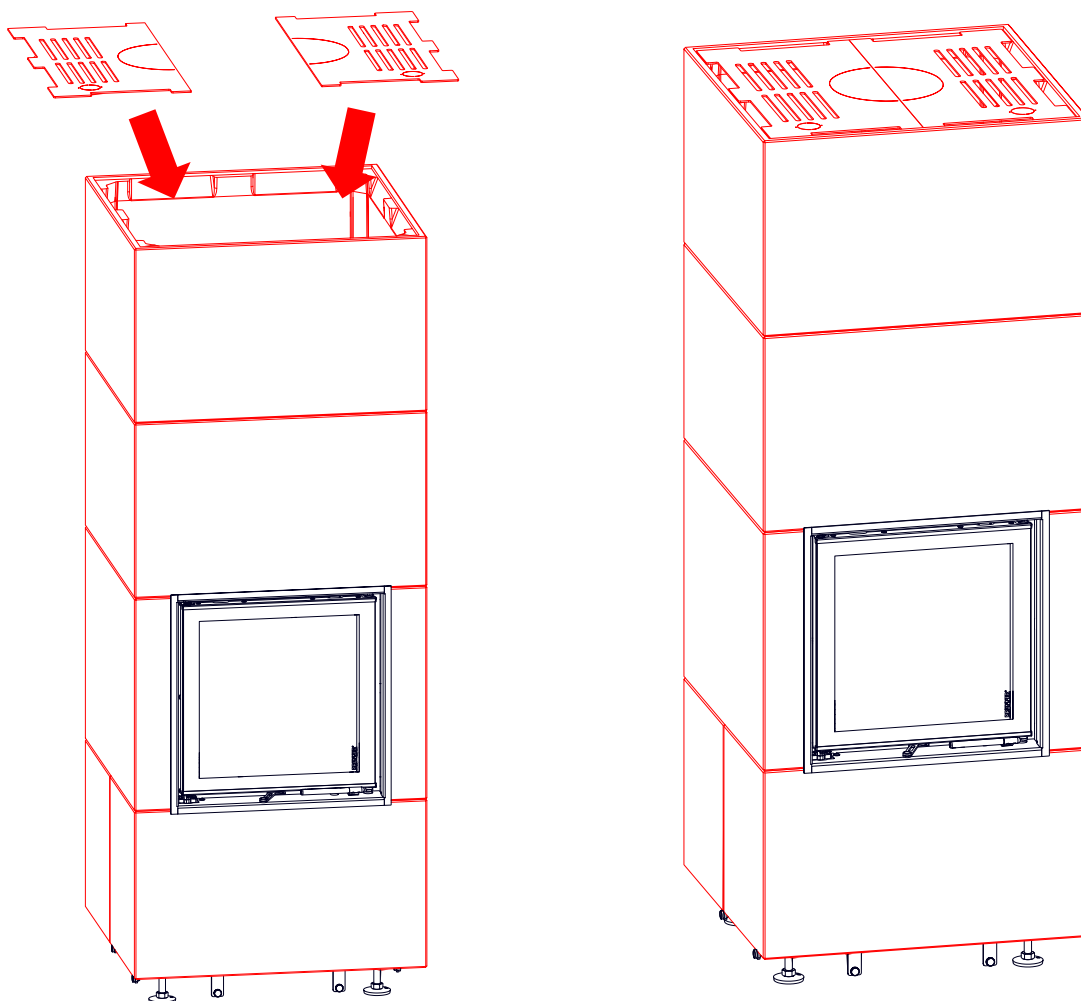

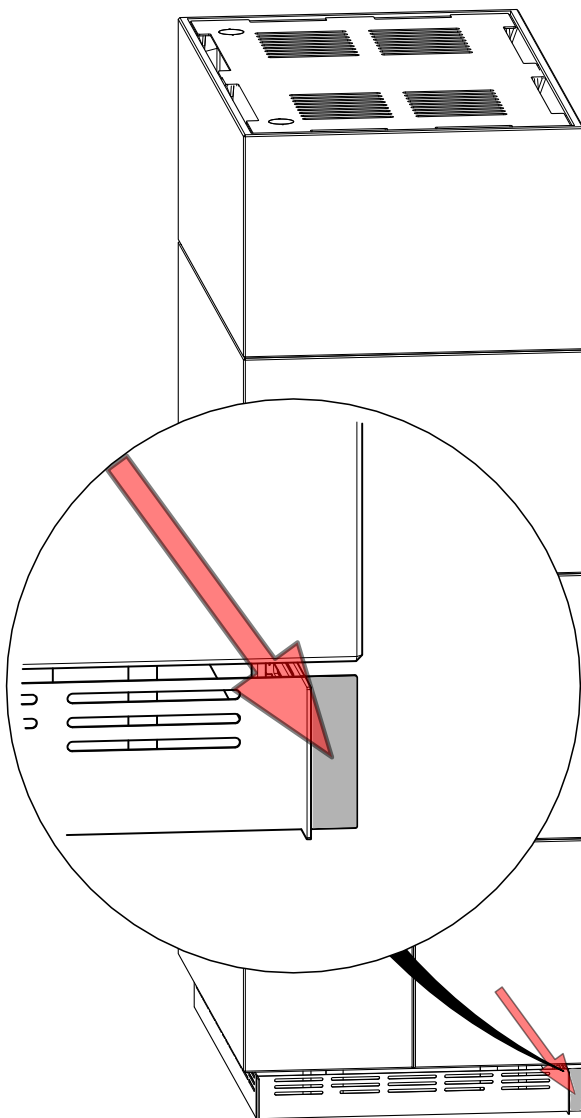


The lower panels are designed so that they are flush with the BSK when the BSK is mounted directly at a wall.

If the BSK is installed free-standing, the 'protruding' sheet metal sections can be cut off at the predetermined breaking point.

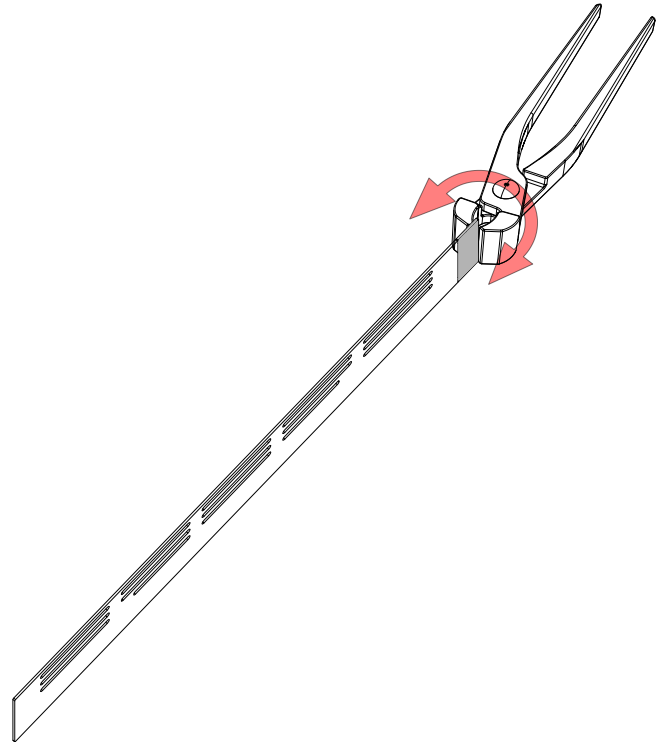


Dimension sheets - BSK flach 42-42 green side-opening door

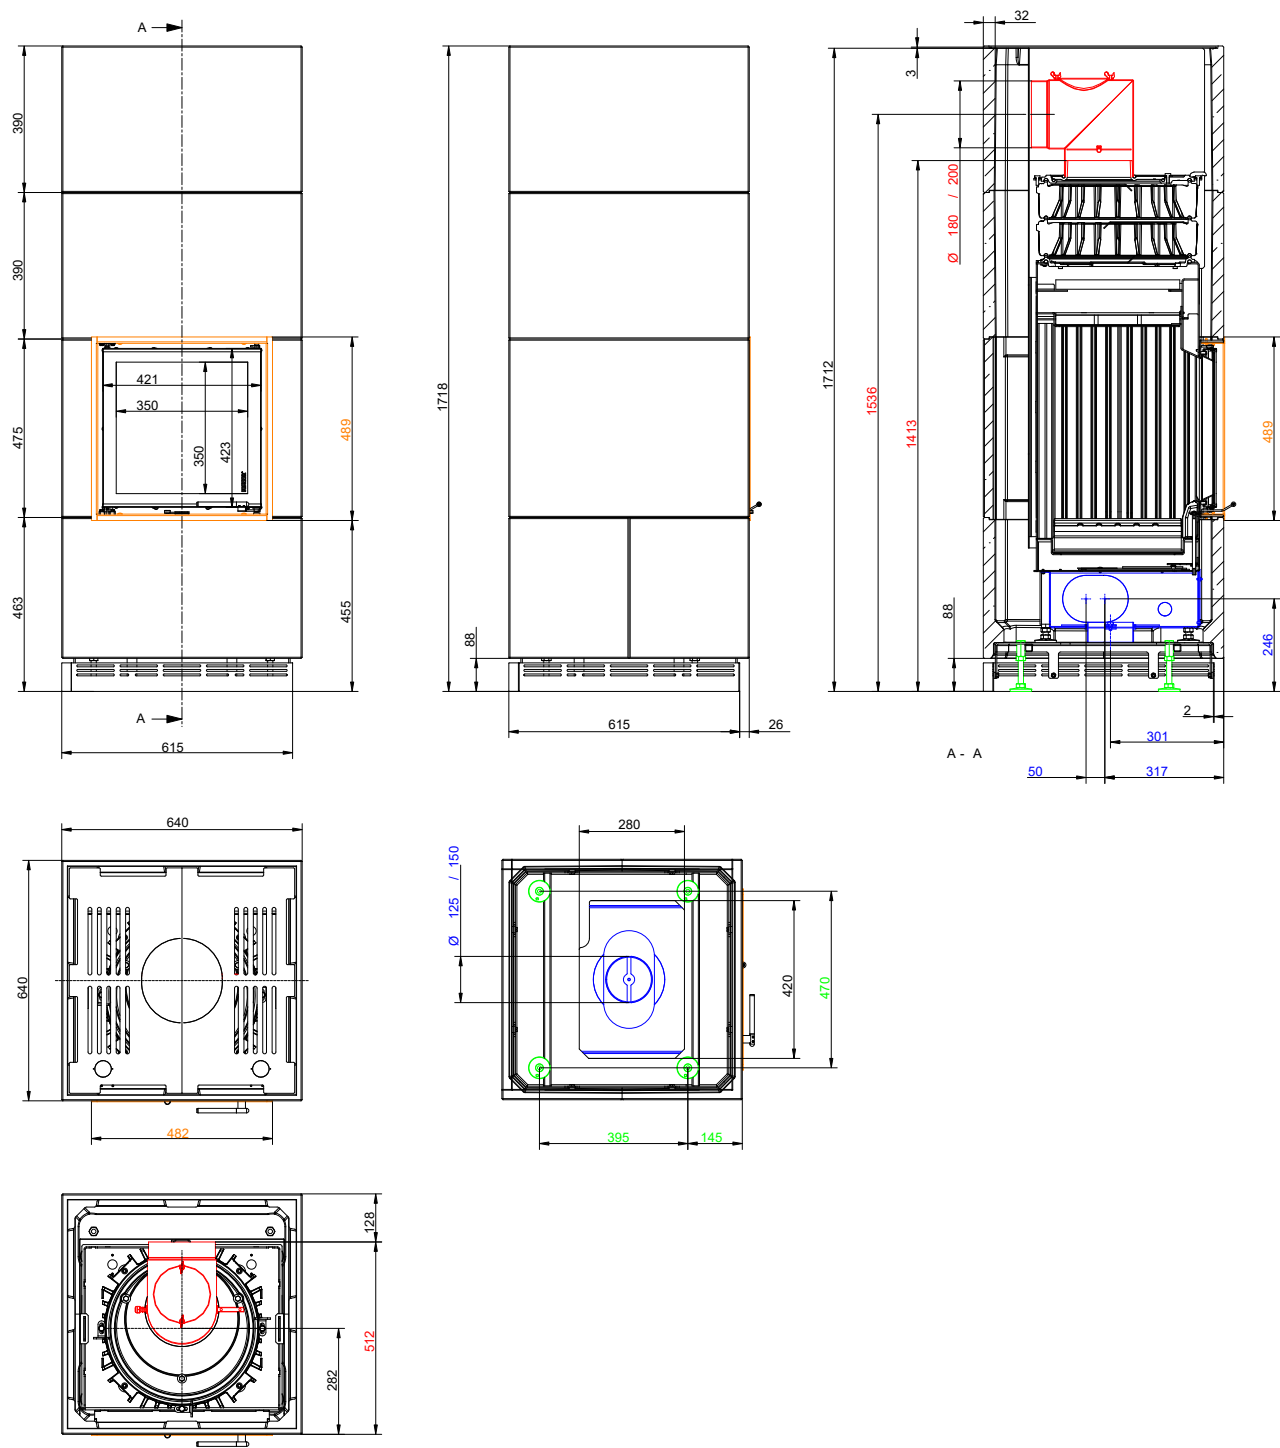

... with side opening door and cast module rings (MRG)

Dimension sheets - BSK flach 42-42 green side-opening door

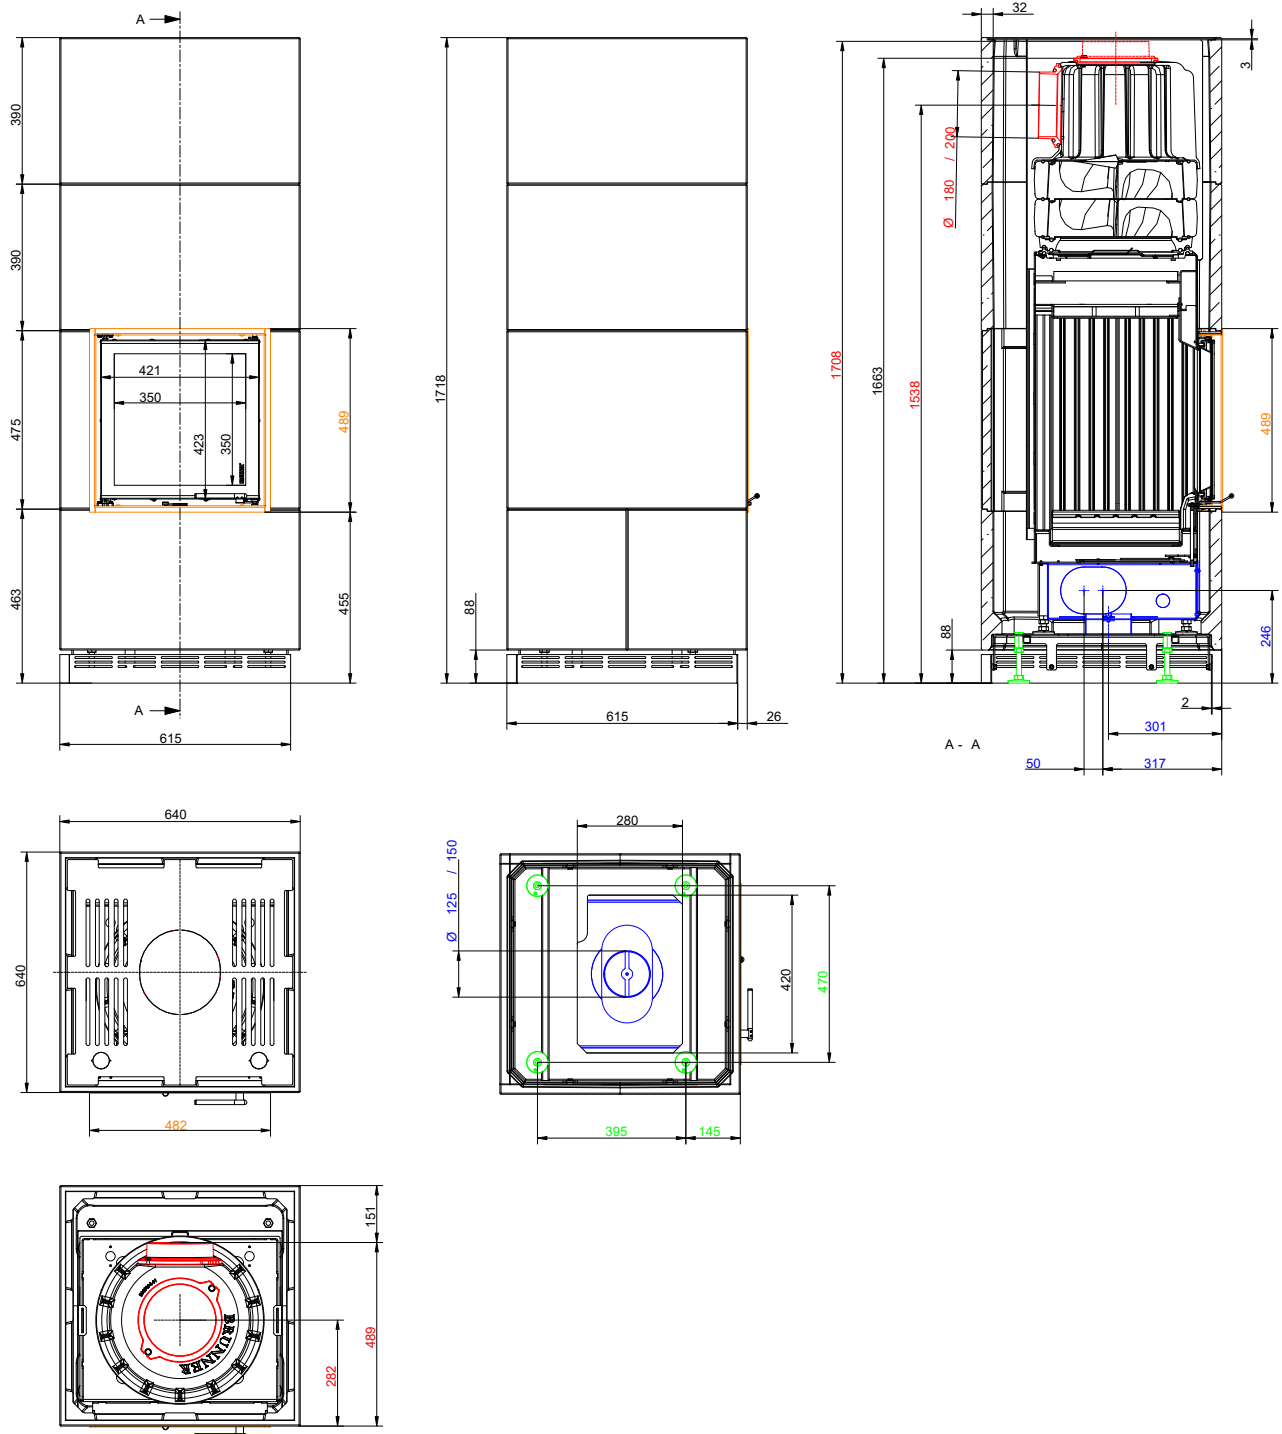

... with side opening door and modular top-mount accumulator MAS

We suggest for CAD planning Palette CAD. Permanent updated drawings: www.brunner.de

Frames/ flue gas outlet connection/ combustion air supply connection/ front variants/ support bearing are marked in color.

Planning and installation - BSK flach 42-42 green side-opening door

Tested according to		EN 13229
Data for functional demonstration		
Rated heat power	kW	7
Fire wood volume	kg/h	1.5
Flue gas mass flow	g/s	6.6
Flue gas temperature	°C	210
Necessary supply pressure ¹⁾	Pa	12
Combustion air consumption	m ³ /h	18
Combustion air connection Ø	mm	125
Cladding components ²⁾		
Foot print (W x D)	mm	640 x 640
Overall height	mm	1718
Height of extension ring	mm	-
Minimal distances		
to mounting wall	cm	5
to mounting wall with heat protection panels	cm	0
to combustible mounting wall	cm	10
to combustible mounting wall with heat protection panels	cm	5
from top of fireplace to ceiling	cm	50
Cross-section of gratings ³⁾		
Exhaust warm air	cm ²	500
Recirculation air	cm ²	600
Minimum distances in front of the combustion chamber, Glass ceramic / glass ceramic coated (GKB)		
for combustible parts	cm	≥ 120 / ≥ 80
Weight		
Total weight	kg	435
Meets requirement/limit values for:		
Germany/ Austria / Switzerland / Norway		1.BImSchV (Stufe 2) / 15a BVG (2015) / LRV / NS 3059

1) Damper flap recommended

2) Quality features of the cladding components in concrete look (fair-faced concrete class 2-3)

Dimensional tolerances of the casting mold parts

Straightness: +- 2 mm/m

Length/width/thickness: +- 2 mm

Squareness: +- 2 mm

Flatness: +- 2,5 mm

Surface to visible side

Textur: closed and largely uniform; repair areas with color changes and hairline cracks permissible.

Porosity: max. three holes with diameter <10 mm and depth <10 mm (reference area 100x100 mm).

Colour shade: uniform, large-area light/dark discolouration and cement haze permissible; no rust and dirt spots as well as different bulk layers.


Note: deviations in color tone (e.g. extension rings) can be adjusted by applying a glaze-like paint (our recommendation: DecoLasur Matt tinted in the colour shade Schiefer16, Caparol).

With the BRUNNER revision set (Art. No. 900300), touch-up work can be carried out on the cladding components.

3) Existing convection air openings. If the construction differs from the supplied system kit (e.g. construction up to the ceiling or closed construction), the information in the data sheet is decisive for carrying out the cross section of the convection air openings.

Product data sheet according to (EU) 2015/1186:

Supplier's name or trademark	Ulrich Brunner GmbH
Model identifier:	BKH 5.0 Flach 42-42 green DT
Energy efficiency class:	A+
Direct heat output:	7,0 kW
Indirect heat output:	N.A. kW
Energy efficiency index:	115,7
Fuel energy efficiency (at nominal heat output):	87,0 %
Fuel energy efficiency (at minimum load):	N.A. %
Special precautions: see supplied product documentation	Siehe Produktdokumentation!

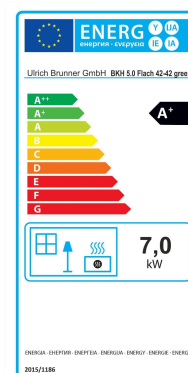

Ulrich Brunner GmbH
Zellhuber Ring 17-18
D-84307 Eggenfelden
Tel.: +49 (0) 8721/771-0 / Fax: +49 (0) 8721/771-100
Email: info@brunner.de

Technical and assortment changes as well as errors and misprints reserved.
Reprinting and reproduction, even in part, only with the express permission of the publisher.

Art.-Nr. 203045